



Link-It™ INSTALLATION INSTRUCTIONS

SOFT SHACKLE ANATOMY:

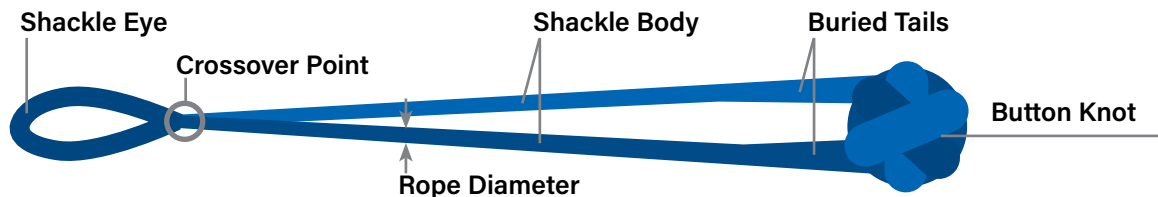


SHACKLE CONFIGURATION TWO-PASS

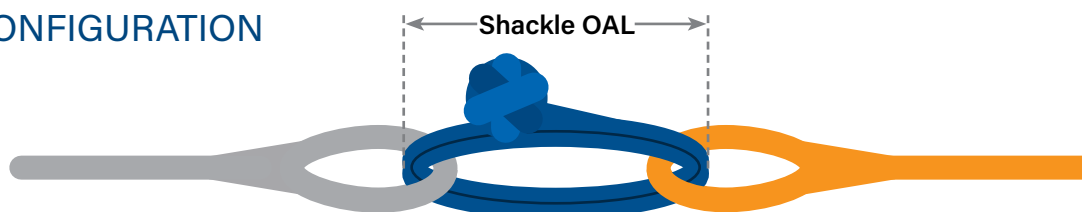


1 Set the bearing points close together, about one foot less than the desired shackle overall length.




2 Place the button knot between the two bearing points. Avoid placing the base of the tail on the bearing point if possible.

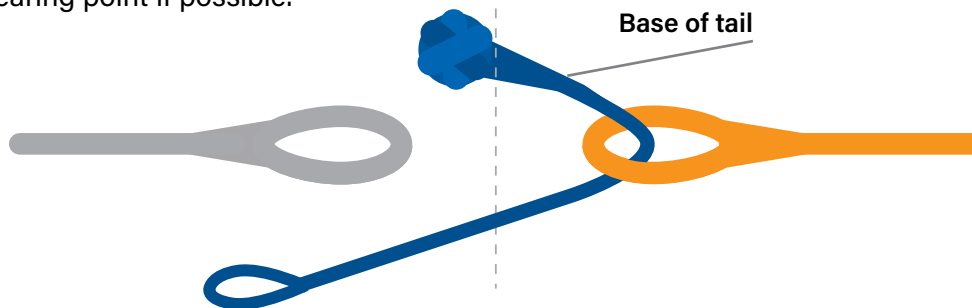

3 Thread the shackle eye end around the other bearing point.

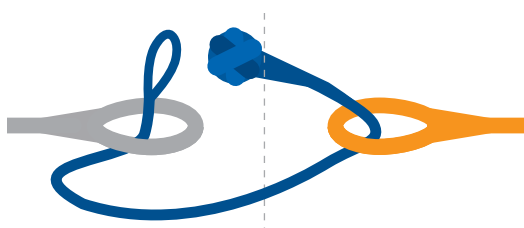

4 For a 2-pass system, thread the shackle eye through the first and second bearing points again. Balance the length of each shackle leg as much as possible (when loaded, they will adjust even more so).

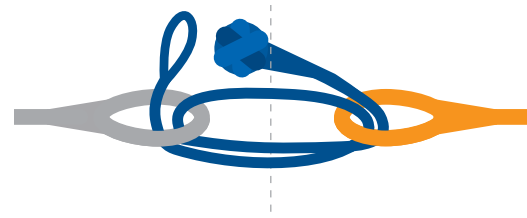

5

Widen the shackle eye by pulling on the penetrating leg at the crossover point. Pull until the eye can fit over the button knot.



6

Place the eye over the knot and rest the knot close to the crossover point. Secure the eye by pulling the same body leg in the opposite direction. Tighten the eye by hand.



7

FINISHED TWO-PASS INSTALLATION. As the shackle is loaded the legs will adjust and balance.

